

Направляющие втулки для колонок



d1		B																d2	d3	l1	l2	Series
		16	20	26	36	46	56	66	76	86	96	106	126	146	166	186	206					
9	10																14	16	3	3	N 10	
11	12																18	22	6	6	N 12	
15	16																24	28	6	9	N 16	
19	20																28	32	6	9	N 20 N 22	
23	24																32	36	6	9	N 25 N 30 N 35	
33	34																42	46	6	9	N 40 N 45 N 50 N 55	
41	42																50	54	6	9	N 60	